

Voyager Air Firmware Release 2.0

Version 2.0.17

May 27, 2014

*[Note: This firmware release was developed to accompany Release 2.0 of the app software, both for iOS and Android. **It is compatible with the original Voyager Air drives. Voyager Air 2 drives should ship with this version of firmware pre-installed. If not, please contact Corsair customer support for assistance.**]*

Before You Install:

1. This firmware installer will **start automatically** when it is found in the root directory of the drive and the drive is restarted.
2. The installer will **reset** the drive name to the default ("VoyagerAir") and remove a wireless password if one has been enabled.
3. Please ensure you are using a **wall adapter**.

*Note: It's **strongly** recommended that you scan the disc for problems before running the update. On Windows, this means running "Check Disk", and for OS X users it means "Disk Utility > Repair". The firmware update seems to be very sensitive to file corruption on the drive, which can easily be caused by unplugging it from USB without ejecting it first.*

To Install:

1. **Connect** the drive to your computer with the USB cable, and turn the drive on. (Connect the drive to DC power using a wall adapter if possible).
2. **Copy the file** "VoyagerAir-dev.pkg" into the top-level folder (root) on your drive. DO NOT rename the file.
3. Turn off the drive.
4. **Disconnect the USB cable** (the update will not install if USB is still connected).
5. Turn the drive on again.
6. You should soon see the Wi-Fi **icon blinking**, indicating that the update is being installed.
7. When the icon stops blinking the update will be **complete**.

Remember to also download and install the **Release 2.0 version of the App** (from iTunes, Google Play or the Amazon App Store) onto your mobile device.